IF YOUR DEHUMIDIFIER FAILS TO OPERATE

1. Check that the plug is fully pushed into the socket and is switched on.
2. Check with some other electrical device that the wall socket is “live”. If it is not, contact a qualified electrician.
3. Check the fuse in the plug. If you replace the fuse, refit with a 13Amp fuse.
4. Check the humidistat control is turned clockwise.
5. Check that the faulty pump indicator light is not illuminated on the control panel.

Should none of the above remedies work, then disconnect from the mains. Contact the help line on 01388 664400. DO NOT attempt to repair the unit or unscrew the outer casing.

ELECTRICAL CONNECTION

If the appliance is fitted with a plug for which your socket is unsuitable, then it should be cut off and an appropriate plug fitted..

This appliance complies with the suppression requirements of the EEC direction 82/199/EEC as embodied in BS800:1988.

IMPORTANT:- The wires in this mains lead are coloured in accordance with the following code:-

Green & Yellow	Earth
Blue	Neutral
Brown	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your own plug, proceed as follows:

The wire which is coloured Green and Yellow must be connected to the terminal in the plug which is marked with the letter E or by the Earth Symbol or coloured Green and Yellow. The wire which is coloured Blue must be connected to the terminal in the plug which is marked with the letter N or coloured Black. The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Red.

You must dispose of the non rewireable plug once it has been removed from the flexible cord. It is dangerous to attempt to insert the plug into any electrical socket elsewhere in the house. If the flexible cord becomes damaged it must be replaced by an identical cord.

CHANGING THE FUSE

Only 13 Amp fuses that are ASTA approved to BS1362 should be used.

The fuse cover must be refitted after replacement of the fuse. In the event of the fuse cover being lost or damaged, the plug must not be used until a replacement is obtained. Replacement fuse covers, which must be coloured BLACK, are obtainable from electrical retailers.

WARNING – THIS APPLIANCE MUST BE EARTHED

TECHNICAL SPECIFICATIONS

CD35P	230V/50Hz/1 Phase
Height	550 mm
Width	345 mm
Depth	350 mm
Weight	26 kg
Min Operating Temperature	1 ℃
Max Operating Temperature	35 ℃
Water Extraction (24hrs) 32℃ / 90%RH	10 l
Max Power Consumption 32℃ / 90%RH	250 W
Max Running Current	2 A
Fuse Rating (UK)	13 A
Pump Capacity	3.2 l

- Do not remove the front or rear panels
- This machine should be serviced by qualified Ebac personnel or other persons having technical competence servicing refrigeration equipment following the instructions in the Ebac service manual.
- Ebac service manuals and spares lists are available upon request by contacting your local Ebac distributor.
- Never operate the unit in a bathroom or swimming pool area
- Do not use the machine if the power cord or cabinet are damaged.
- Do not poke objects into and of the grilles on the machine.
- Do not cover or obstruct the air inlet or outlet.
- When running, the noise level of this machine is less than 70dba
- This machine complies with the electromagnetic compatibility 1992 regulations.
- This machine has been manufactured in the United Kingdom.
- Ensure this unit is protected by a 15A Circuit

HEAVY DUTY
CD35P
DEHUMIDIFIER
USER MANUAL

Drawing No. :- TPC207
Issue :- 2
Date :- 24/01/12

IMPORTANT

Your Ebac Dehumidifier is packed in a plastic wrapper – please ensure that it is disposed of safely and where it will not be a danger to children

INTRODUCTION

Your Ebac Heavy Duty Dehumidifier is designed to help dry flooded or damp areas. Ideal where natural drying is just too slow. Drying with a dehumidifier enables fast drying without problems assosiated with heat drying plaster, etc can crack.

HOW YOUR DEHUMIDIFIER WORKS

Your dehumidifier draws in the moist air, cooling it to a temperature where excess moisture will condense, thereby removing the excess moisture. This in turn dries anything in the immediate area which is damp. The moisture is collected in the water container. The air is rewarmed and passed back approximately 2°C warmer.

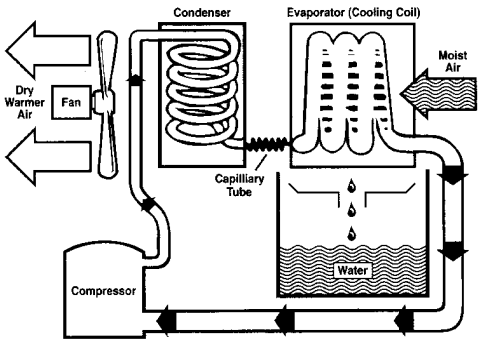

OPERATING YOUR DEHUMIDIFIER

OPERATING YOUR DEHUMIDIFIER

The amount of moisture removed by your dehumidifier will vary according to the conditions in which it is operating. For example, operating in very cold temperatures will reduce water extraction levels.
The time taken to dry an area will depend on the size of area to be dried and level of moisture to begin with. To achieve maximum benefit form your dehumidifier, you should ensure :-

a) It is permanently connected to the mains and controlled via the Humidistat
b) It is not switched off for long periods of time due to an incorrect setting of the Humidistat or because the condensate pump is not working.
c) Door to areas not to be dried are kept closed.
d) External doors and windows are kept closed as much as possible.

CONTROLS

Your dehumidifier is fitted with an adjustable humidistat and faulty condensate pump indicator.



SWITCHING ON YOUR DEHUMIDIFIER

Before connecting it to the mains you should ensure that the humidistat is turned fully anti-clockwise (fig A). Once connected to the mains power, the humidistat control should be turned clockwise until you hear the unit operate (fig B)
To protect the compressor, you should allow 5 minutes between switching the dehumidifier off and on again.

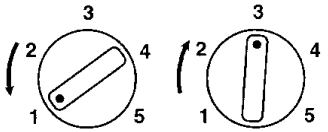

Fig. A

Fig. B

OPERATING THE HUMIDISTAT

The humidistat works in a similar way to a central heating thermostat, but instead of measuring temperature, it measures the amount of moisture in the air. You may select the level of moisture you require (known as Relative Humidity) and the unit will operate to achieve that level and then switch off.
As a general guide, the higher the setting the lower the Relative Humidity will be before the machine switches off. Therefore the machine will operate longer to achieve this.
If the dehumidifier switches off and drying is not complete it is possible that the humidistat setting is too low and may need increasing (fig C.). Conversely, if you no longer have condensation and the unit is still operating, then the humidistat setting may need reducing (fig D.)

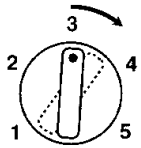

Fig. C

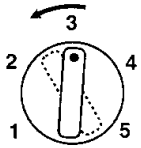

Fig. D

DEFROST OPERATION

At certain temperatures, the water taken freezes onto the pipes inside your dehumidifier and therefore needs to be defrosted. This model features an automatic defrost which will clear any ice build up.

USER MAINTENANCE

EMPTYING THE WATER CONTAINER

As the condensate pump fills with water it will automatically activate and empty via the tube outlet located at the back of the dehumidifier, this should be connected to a water container or permanent drain. If the pump fails then the dehumidifier will automatically switch off and the warning indicator on the controls panel will illuminate. NOTE: after the pump has emptied there will still be a small amount of water standing in the pump reservoir which will leak if the dehumidifier is not kept upright.

PERMANENT DRAINAGE

When your dehumidifier is to be used constantly in one area, it can be fitted to drain continuously. Ideal when the property is to be left unoccupied.
To do this fit the supplied tubing (7meters long) to the quick release connection at the back of the dehumidifier and run the tubing to a suitable drain. If no tube is supplied then a suitable length of tubing with a 3/8" inside diameter should be used. Once the tubing is fitted the dehumidifier will automatically empty as the pump fills. NOTE the tubing should not be more than 2meters above the height of the pump as flooding within the unit may occur or the condensate pump damaged.

USE OF PERMANENT DRAINAGE

When in use tubing should be run to a suitable drainage point, ensuring that the tube doesn't rise more than 2meters above the condensate pump outlet, otherwise flooding may occur.